

Thermosiphon Engine Heaters

WL Series
Weathertight
Three Phase

2500-5000 Watts



WL Model without thermostat



WL Model with thermostat

WL Heaters with Thermostats

WL heaters are only available with a fixed setting temperature sensor.

Temperature Range		Numerical Code
ON	OFF	
100°F (38C)	120°F (49C)	10

WL Replacement Thermostats

Example:


Model Number: WL325210-200
T-Stat Replacement: FSU10

Temperature Range		Sensing Unit
ON	OFF	
100°F (38°C)	120°F (49°C)	FSU10

Engine Displacement	Model Number without Thermostat	Model Number with Thermostat	Volts	Watts	Phase	Amps
600 – 800 CID 9.8 – 13.1 L	WL325800-000	WL325810-200	208	2500	3	6.9
	WL325200-000	WL325210-200	240	2500	3	6.0
	WL325A00-000	WL325A10-200	400	2500	3	3.6
	WL325400-000	WL325410-200	480	2500	3	3.0
	WL325500-000	WL325510-200	575	2500	3	2.5
800 – 1350 CID 13.1 – 22.1 L	WL340800-000	WL340810-200	208	4000	3	11.1
	WL340200-000	WL340210-200	240	4000	3	9.6
	WL340A00-000	WL340A10-200	400	4000	3	5.8
	WL340400-000	WL340410-200	480	4000	3	4.8
	WL340500-000	WL340510-200	575	4000	3	4.0
1350 – 1650 CID 22.1 – 27.0 L	WL350800-000	WL350810-200	208	5000	3	13.9
	WL350200-000	WL350210-200	240	5000	3	12.0
	WL350A00-000	WL350A10-200	400	5000	3	7.2
	WL350400-000	WL350410-200	480	5000	3	6.0
	WL350500-000	WL350510-200	575	5000	3	5.0

All 3 phase heaters with thermostat must use a control box.
See Control Systems page 30.

WL Model

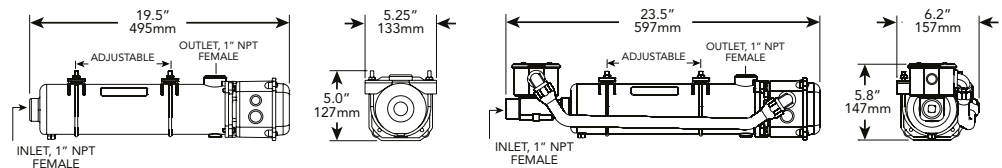

Replacement Parts

Model Number without Thermostat	Model Number with Thermostat	Element Replacement
WL325800-000	WL325810-200	REWL3258
WL325200-000	WL325210-200	REWL3252
WL325A00-000	WL325A10-200	REWL325A
WL325400-000	WL325410-200	REWL3254
WL325500-000	WL325510-200	REWL3255
WL340800-000	WL340810-200	REWL3408
WL340200-000	WL340210-200	REWL3402
WL340A00-000	WL340A10-200	REWL340A
WL340400-000	WL340410-200	REWL3404
WL340500-000	WL340510-200	REWL3405
WL350800-000	WL350810-200	REWL3508
WL350200-000	WL350210-200	REWL3502
WL350A00-000	WL350A10-200	REWL350A
WL350400-000	WL350410-200	REWL3504
WL350500-000	WL350510-200	REWL3505

Common Replacement Parts available for all listed heaters	
High Limit Control	HLC-165
Check Valve	RV-M
Element O-ring	TML-OR
Tank	RTL
Mounting Brackets	FK7

ADAPTER FITTINGS

For the use of 0.75" or 1" ID heater hose, hose barb adapters are available. See below.

HB-1	1" NPT to 1" hose barb adapter. Installs in 1" NPT female inlet or outlet of the heater.
HB-3/4	1" NPT to 0.75" hose barb adapter. Installs in 1" NPT female inlet or outlet of the heater.

